

FPC-02 | Heat Tracing controller with built in fault protection

Features & Benefits

- Automatic control for Heat Tracing and Freeze Protection
- Integrated electronic controller with backlit LCD display
- Adjustable Temperature Set-point
- User friendly interface
- Multiple sensors input optional
- Up to 30A & 120/240V outputs to the heaters load

- Integrated Ground Fault Sensor
- Adjustable Hold-On-OFF Delay and
- Optional Manual On override
- Technician testing / commissioning mode for easy and fast system test all year long (even during summer or at high temp)
- ETL certification



Models:

- FPC-02-120V Supports 30A heating loads at 120VAC
- FPC-02-240V Supports 30A heating loads at 240VAC



FPC-02 | Heat Tracing controller with built in fault protection

Description

The FPC-02 is a "Plug and Play" controller and a power panel for frost protection, Heat tracing, ice and snow melting applications.

When the tempetature drops below the pre-defined adjustable set-points, it activates the contactor energizing the heating elements.

The Technician Settings mode allows installer or technician to adjust the parameters for customized installations using the electronic controller installed in the front panel. The adjustable Hold-On timer, keeps the outputs to the heaters active to ensure complete freeze protection.

The Hold-On (Time delay) is adjustable in the range of 0up to 99 hours.

The FPC-02 Built-in Ground Fault interuptor allows manual reset from the front panel

3 LEDs visible through the transparent plastic cover provides information about the status of the system.

The parameters that can be modified are as follow:

- Temperature set-point
- Lower ambient temperature limit to stop the heaters
- Time delay (Hold-on) before deactivating the heaters
- ON time for Manual mode
- DIP Switches located on the controllers provide easy access to technician mode and to the system configuration settings.
- The FPC-02 allows temperature input both from the provided temperature sensor (10 m. / 30 feet long) and also from a 3rd party aquastat.

- Enable/Disable 2nd temperature sensor logic (Aquastat)
- Commissioning / Test mode
- Restore defaults
- Installing the system is a quick and easy task. Apart of mounting the box to the wall, the installer needs only to connect power lines and the low voltage temperature sensor wires in the marked terminals and the system is ready to work.


Technical specifications

Approvals	ETL Listed	Manual Test GFEP	Push button on Front Panel
	CAN/CSA-C22.2 No. 14		
	UL-508A		
		One Satellite	277 VAC, 30 A Max (Resistive),
Enclosure Protection	IP20, Indoor Mounting	Contactor	50/60 Hz, 1-Pole
Dimensions	8x12x5 inch (20x30x13 cm)		
		High Voltage	6 mm ² ,10 AWG (max)
Ground Fault	Trip current 30mA	Terminal blocks	
Equipment Protection			
(GFEP)		Low Voltage	4 mm ² ,12 AWG (max)
		Terminal blocks	



FPC-02 | Heat Tracing controller with built in fault protection

Wiring diagram

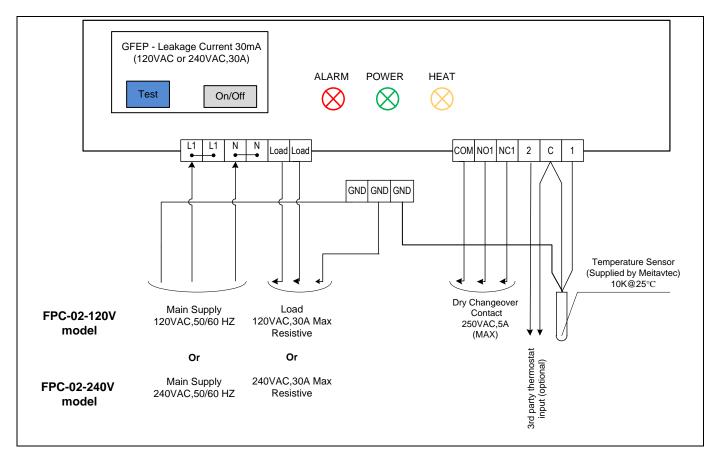

For further information, operating & installation manual, please refer to our website at www.meitavtecamerica.com

The performance specifications are nominal and conform to acceptable industry standards. For applications at conditions beyond these specifications, consult the local Meitav-tec office or representative. Meitav-tec shall not be liable for damages resulting from misapplication or misuse of its products. This document is subject to change without any notice.

© Copyright 2016 Meitav-tec Ltd'. All rights reserved.