


## IRP\_PYRO Installation (option for PYROSELF-X)

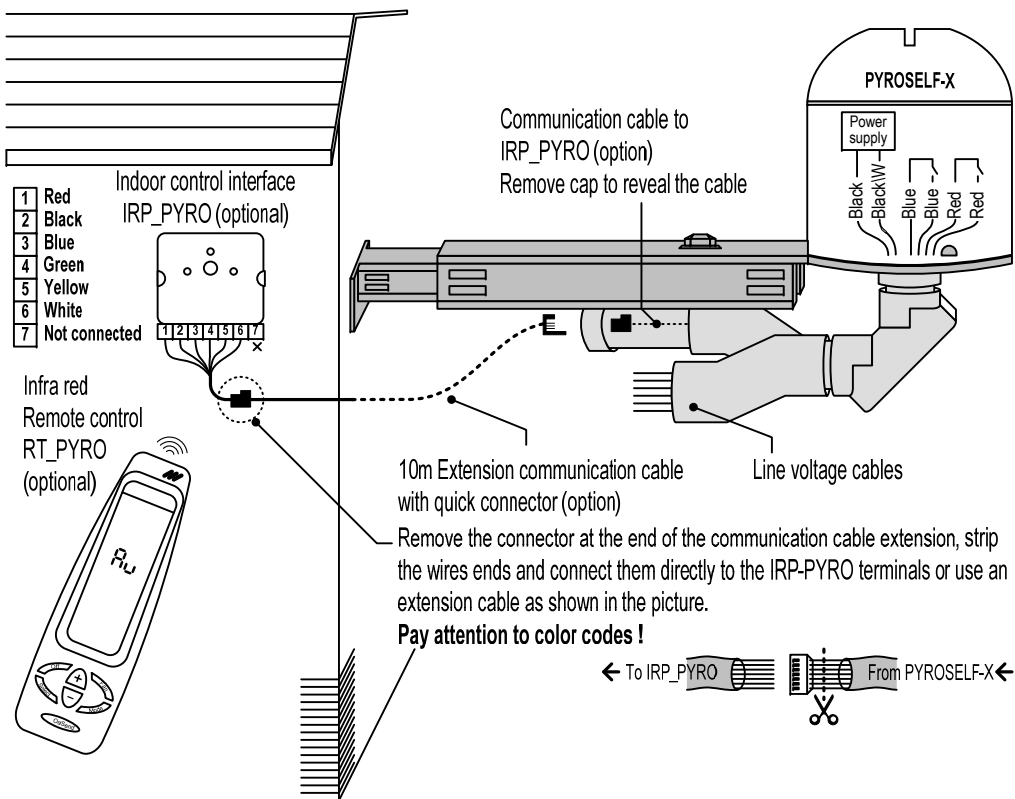

Connecting the indoor control panel IRP\_PYRO (optional):


1. The wiring of line voltage cables must always be carried out in accordance with NEC -NFPA70.
2. The IRP\_PYRO communication cable and the line voltage cables must not be placed in the same conduits.
1. Remove the cap from the end of the Y split conduit to reveal the communication cable and the quick connector.
2. Connect the 10 m extension cable using the quick connectors.
3. Make sure to use separate conduits for the communication cable and the power cables.
4. Connect the indoor control panel IRP\_PYRO to the extension cable. Follow the attached color codes table.

**IRP-PYRO**  
Indoor control interface

Tel: 1.844.400.HVAC (4822)  
Tel: +972-3-9626462  
Fax: +972-3-9626620  
support@meitavtec.com



## IRP\_PYRO Installation (option for PYROSELF-X)

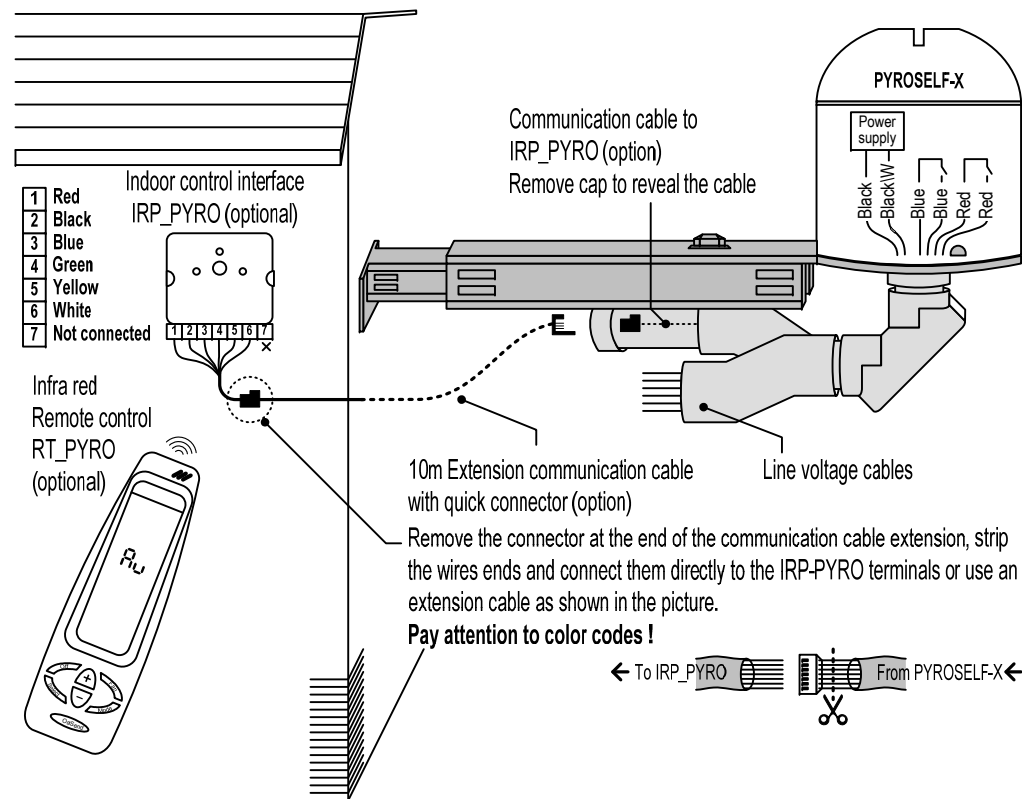

Connecting the indoor control panel IRP\_PYRO (optional):

1. The wiring of line voltage cables must always be carried out in accordance with NEC -NFPA70.
2. The IRP\_PYRO communication cable and the line voltage cables must not be placed in the same conduits.
1. Remove the cap from the end of the Y split conduit to reveal the communication cable and the quick connector.
2. Connect the 10 m extension cable using the quick connectors.
3. Make sure to use separate conduits for the communication cable and the power cables.
4. Connect the indoor control panel IRP\_PYRO to the extension cable. Follow the attached color codes table.


**IRP-PYRO**  
Indoor control interface

Tel: 1.844.400.HVAC (4822)  
Tel: +972-3-9626462  
Fax: +972-3-9626620  
support@meitavtec.com



## IRP-PYRO - Operating Instructions

The IRP\_PYRO can be operated using its [ON/OFF] button or using the RT\_PYRO I.R. Remote control – please refer to the RT\_PYRO operating instructions in this manual.

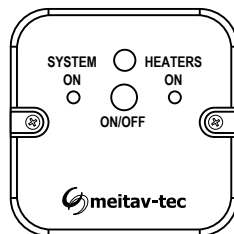

### ON/OFF button

**Press** the [ON/OFF] button to switch between:

- **OFF** The System will remain OFF even if it snows (should be used mainly for summer times).
- **AUTO** The heating system will start depending on the outdoor temperature and humidity sensed by the PYROSELF and will stop after the signal is gone for a predefined time period set by parameter P3 in the technician settings.

**Press and hold** the [ON/OFF] button for 3 seconds to start **MANUAL ON** mode.

The System will start heating for predefined time period set by parameter P4 in the technician settings and return to AUTO MODE when this time ends.

Note: Heaters will not start if the outdoor temperature is more than 2°C/4°F above the set point.

Note: Both AUTO and MANUAL ON commands can be submitted to the PYROSELF, only when the manual ON/OFF switch on the bottom of the PYROSELF is in OM position (⏻)

### LEDs indication

#### - GREEN LED (PWR) – SYSTEM ON

Lighting constantly – System is ON.

Blinking repeatedly (once every 5 seconds) – System is in AUTO mode.

#### - RED LED (HEAT) – HEATERS ON


Lighting constantly – Heaters are turned ON.

Blinking repeatedly (2 seconds ON and 1 second OFF) – System is in OFF DELAY period.

Blinking repeatedly (1 second ON and 3 seconds OFF) – SYSTEM ERROR indication.

## IRP-PYRO - Operating Instructions

The IRP\_PYRO can be operated using its [ON/OFF] button or using the RT\_PYRO I.R. Remote control – please refer to the RT\_PYRO operating instructions in this manual.

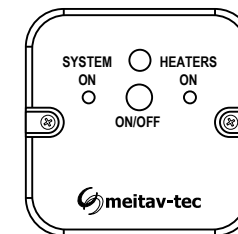

### ON/OFF button

**Press** the [ON/OFF] button to switch between:

- **OFF** The System will remain OFF even if it snows (should be used mainly for summer times).
- **AUTO** The heating system will start depending on the outdoor temperature and humidity sensed by the PYROSELF and will stop after the signal is gone for a predefined time period set by parameter P3 in the technician settings.

**Press and hold** the [ON/OFF] button for 3 seconds to start **MANUAL ON** mode.

The System will start heating for predefined time period set by parameter P4 in the technician settings and return to AUTO MODE when this time ends.

Note: Heaters will not start if the outdoor temperature is more than 2°C/4°F above the set point.

Note: Both AUTO and MANUAL ON commands can be submitted to the PYROSELF, only when the manual ON/OFF switch on the bottom of the PYROSELF is in OM position (⏻)

### LEDs indication

#### - GREEN LED (PWR) – SYSTEM ON

Lighting constantly – System is ON.

Blinking repeatedly (once every 5 seconds) – System is in AUTO mode.

#### - RED LED (HEAT) – HEATERS ON

Lighting constantly – Heaters are turned ON.

Blinking repeatedly (2 seconds ON and 1 second OFF) – System is in OFF DELAY period.

Blinking repeatedly (1 second ON and 3 seconds OFF) – SYSTEM ERROR indication.